





strokovnjak za strehe


Mesta uporabe

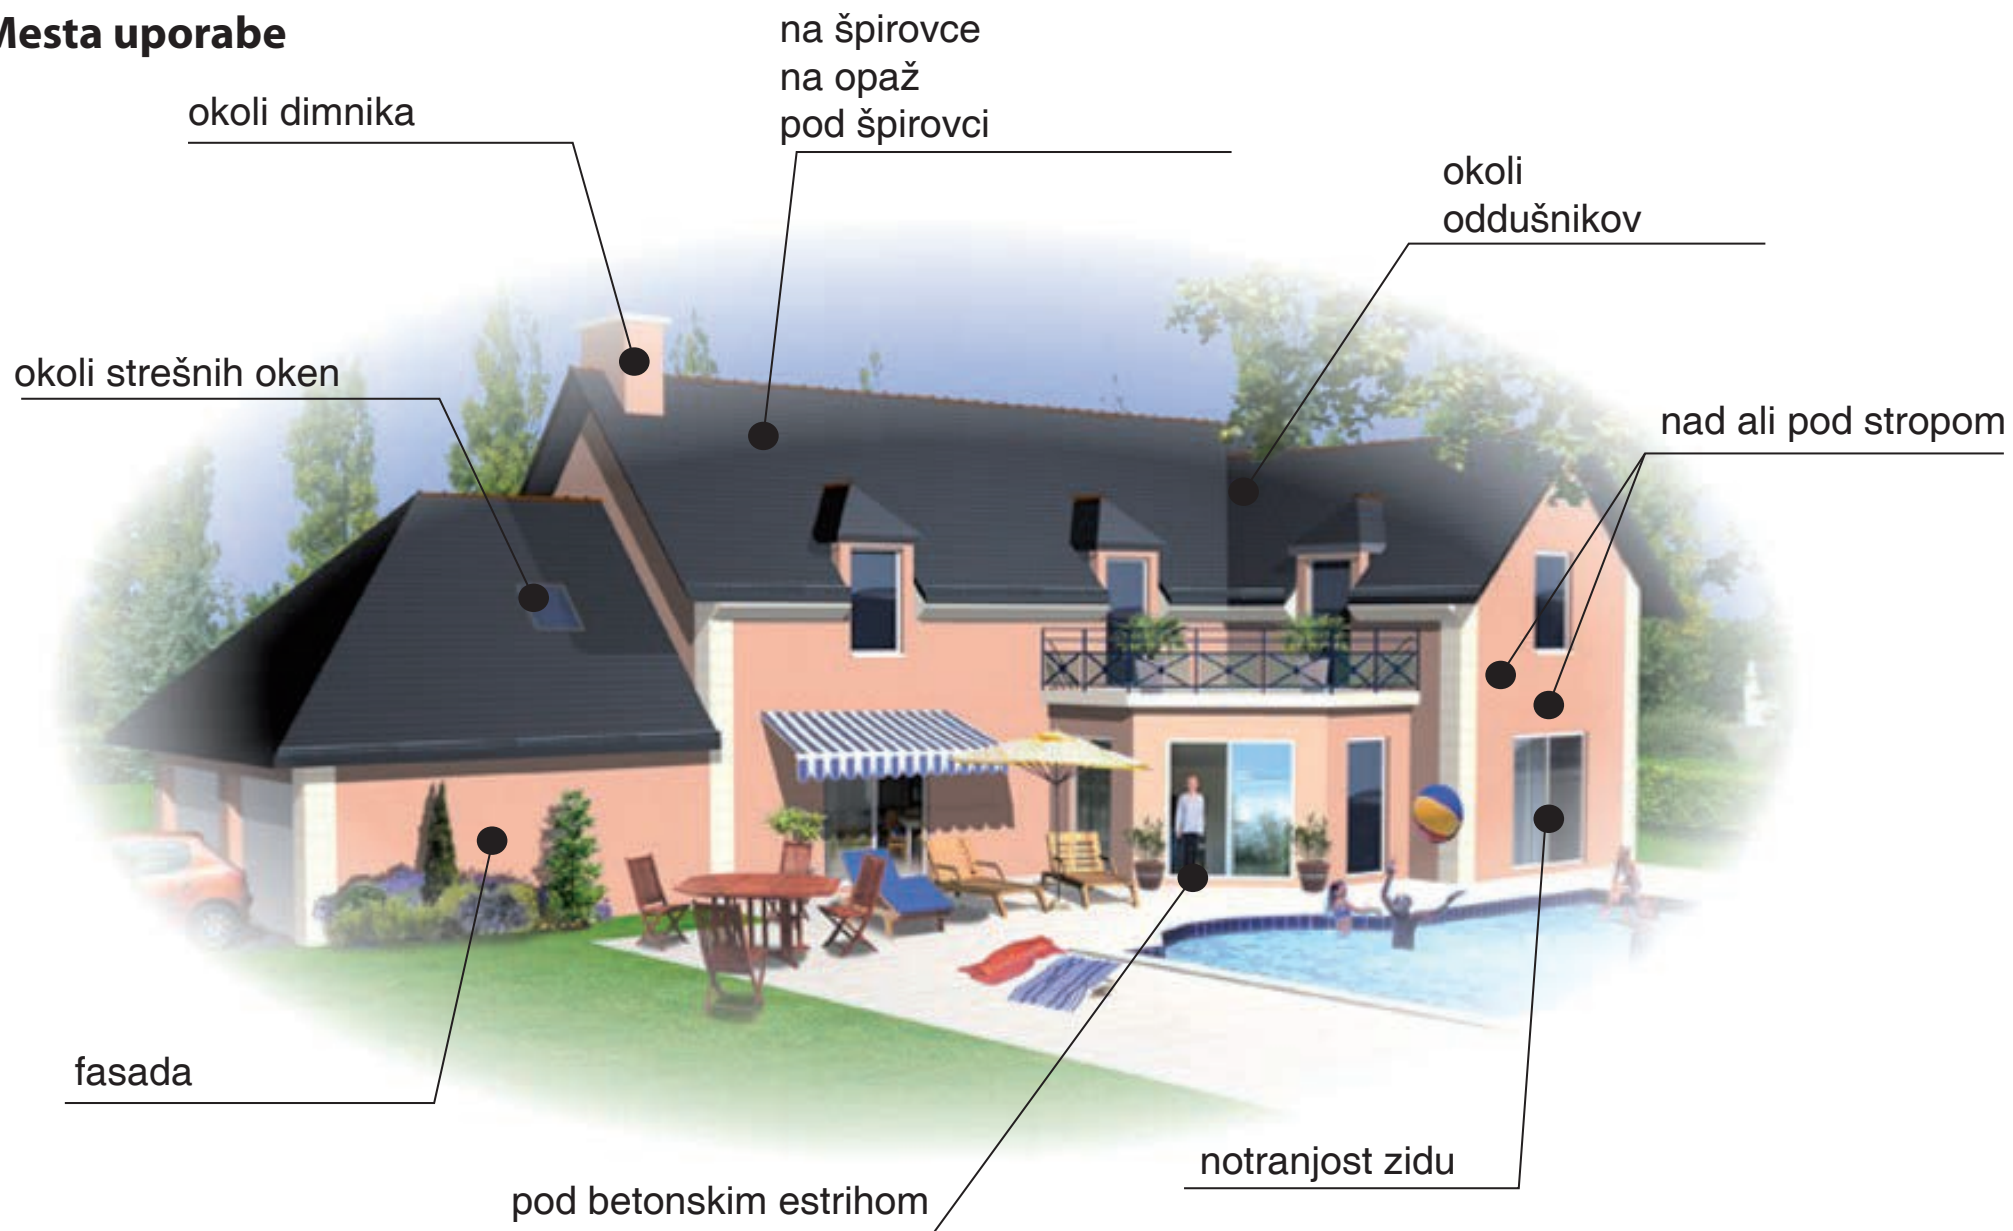




Osnovni princip odbojnosti oz. refleksije

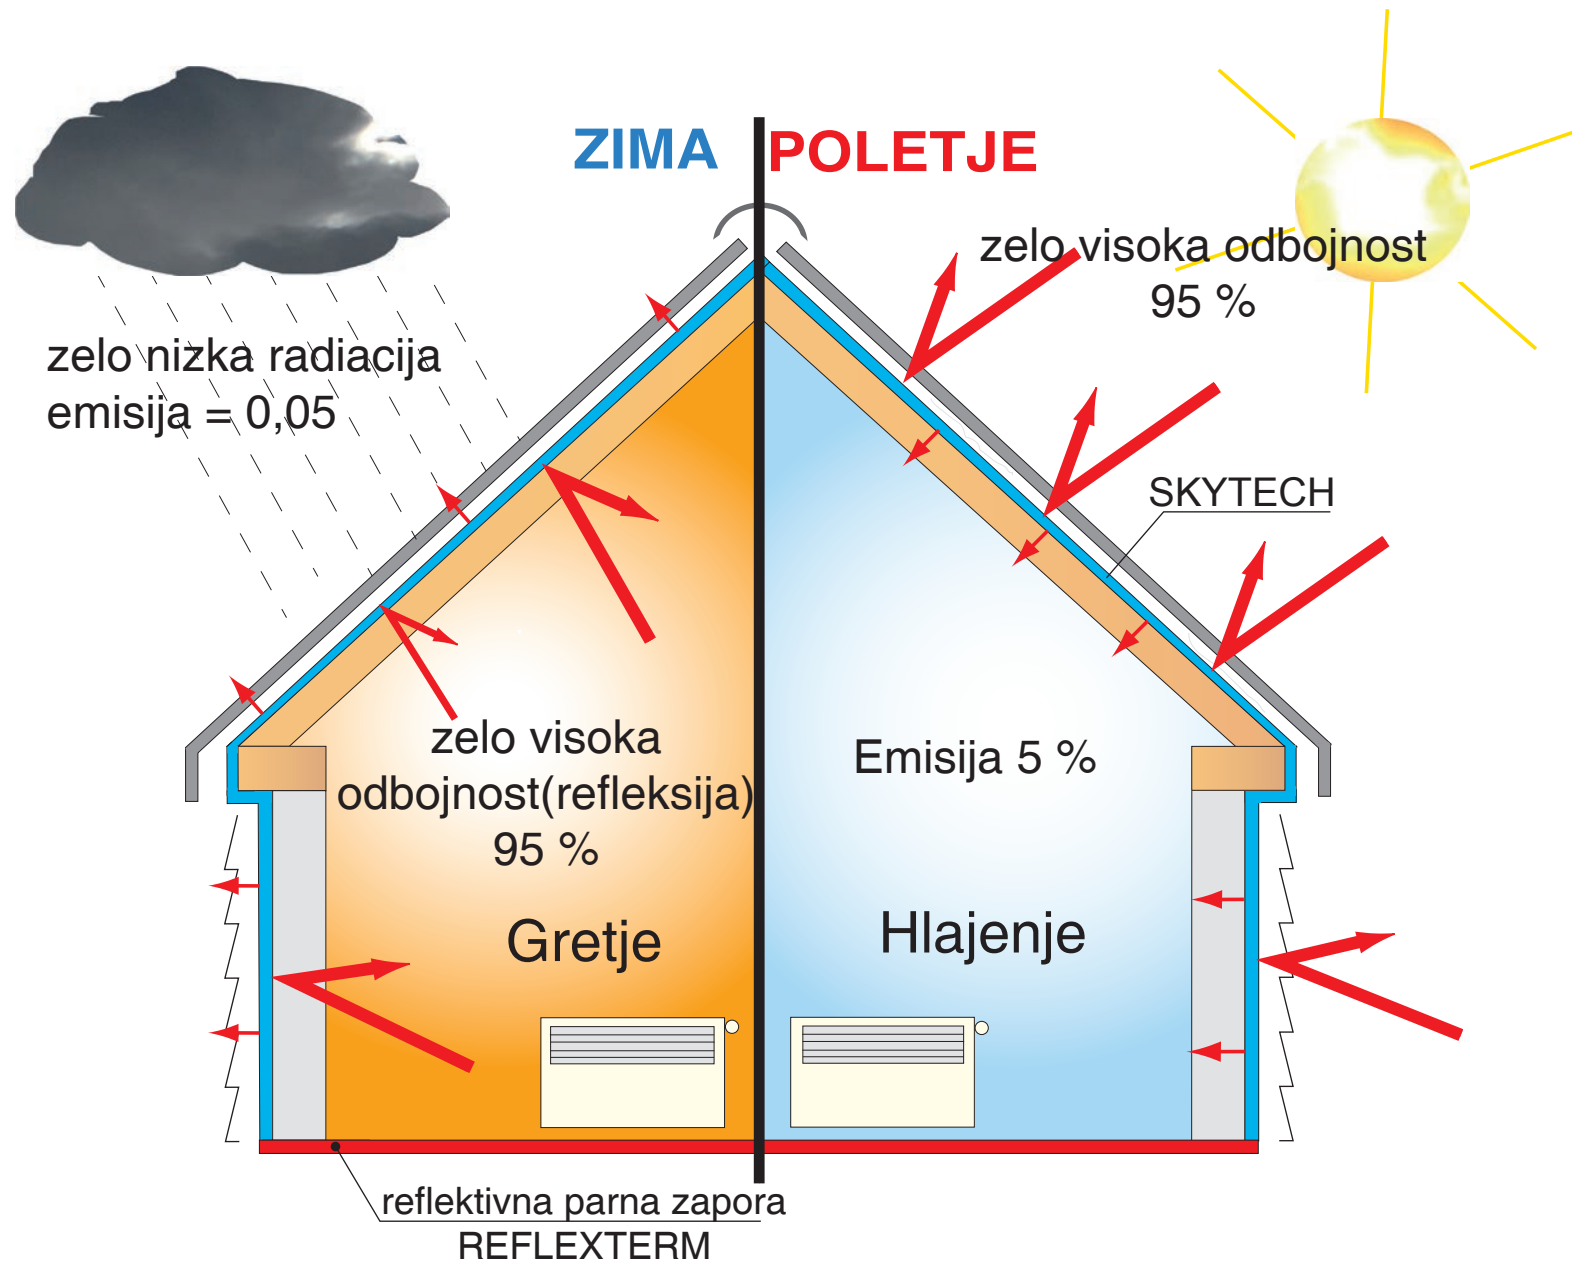


Funkcije vodotesnosti, zrakotesnosti in parne prepustnosti

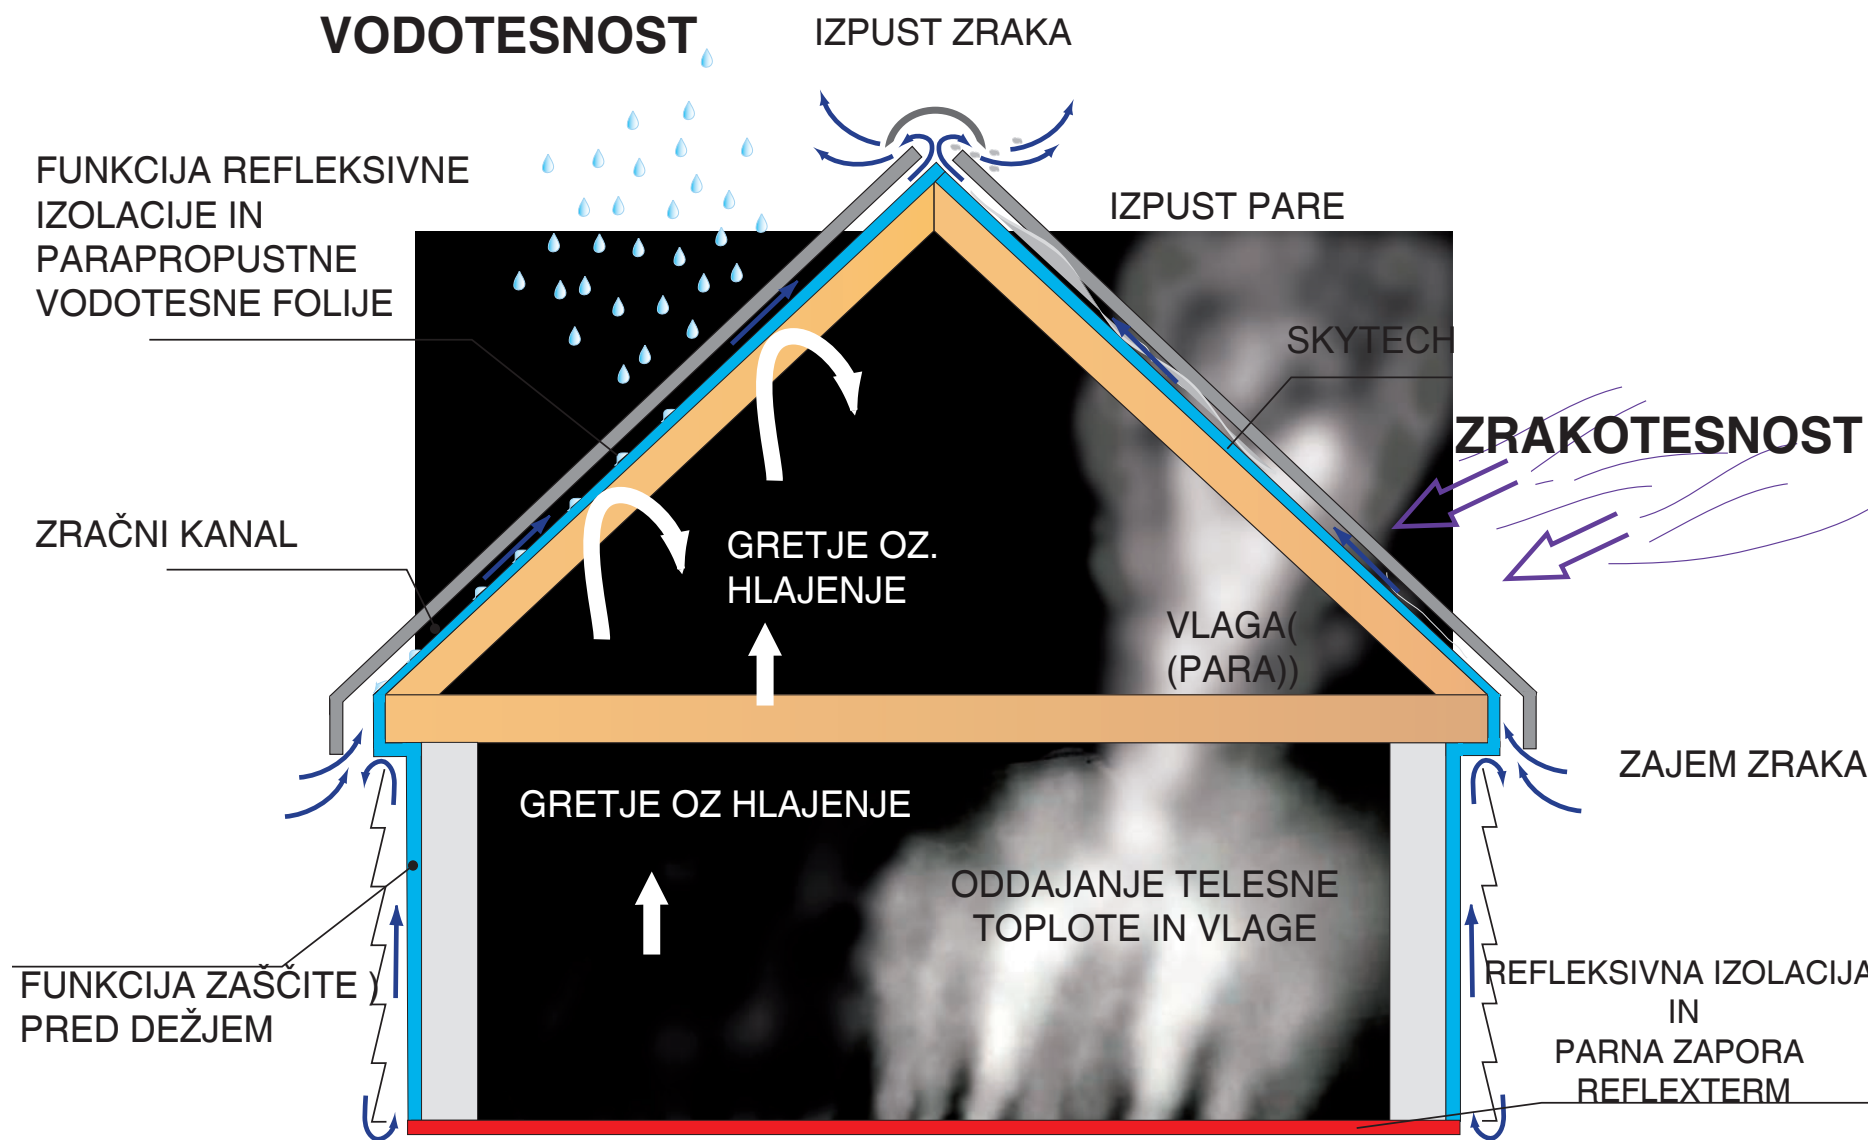


Detajl montaže na škarnike

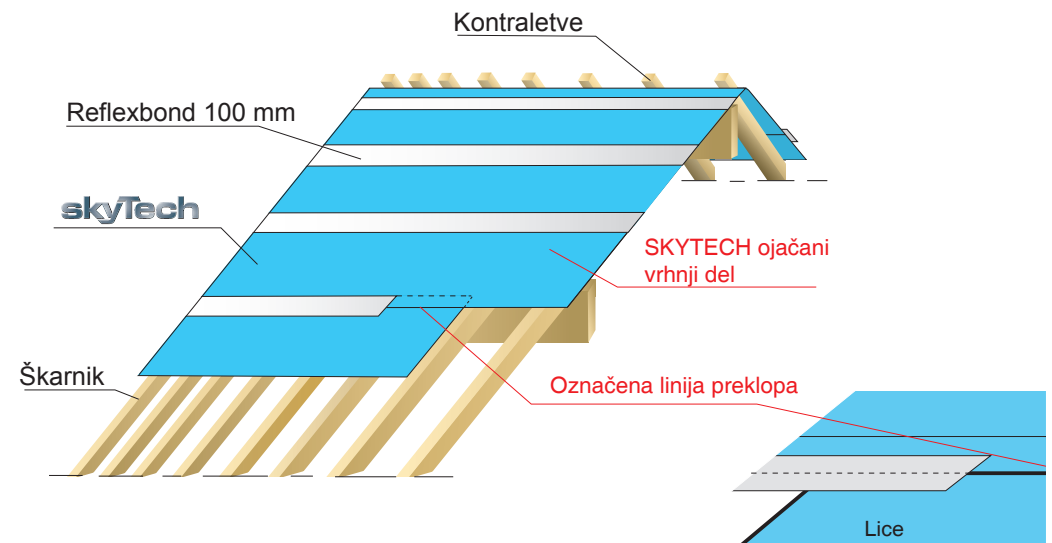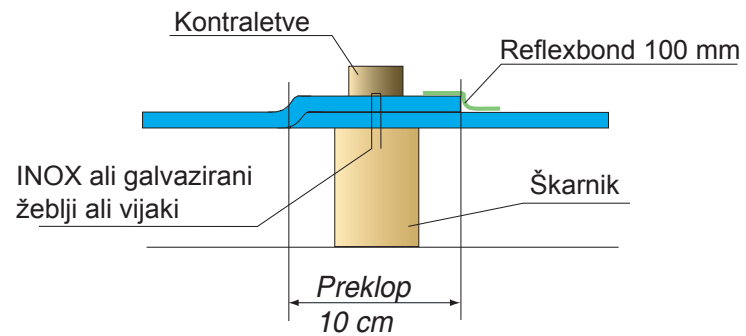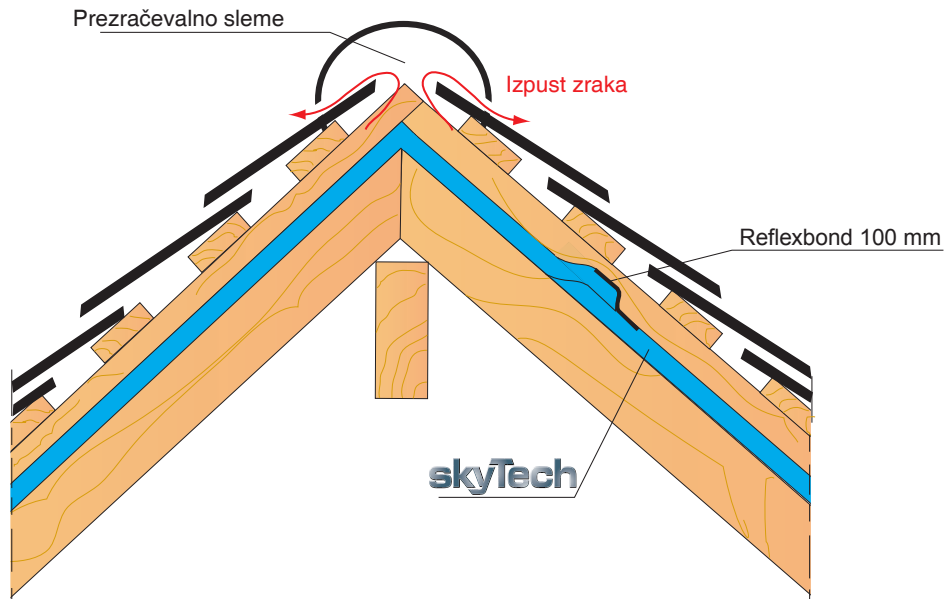


Montaža preko špirovcev 2

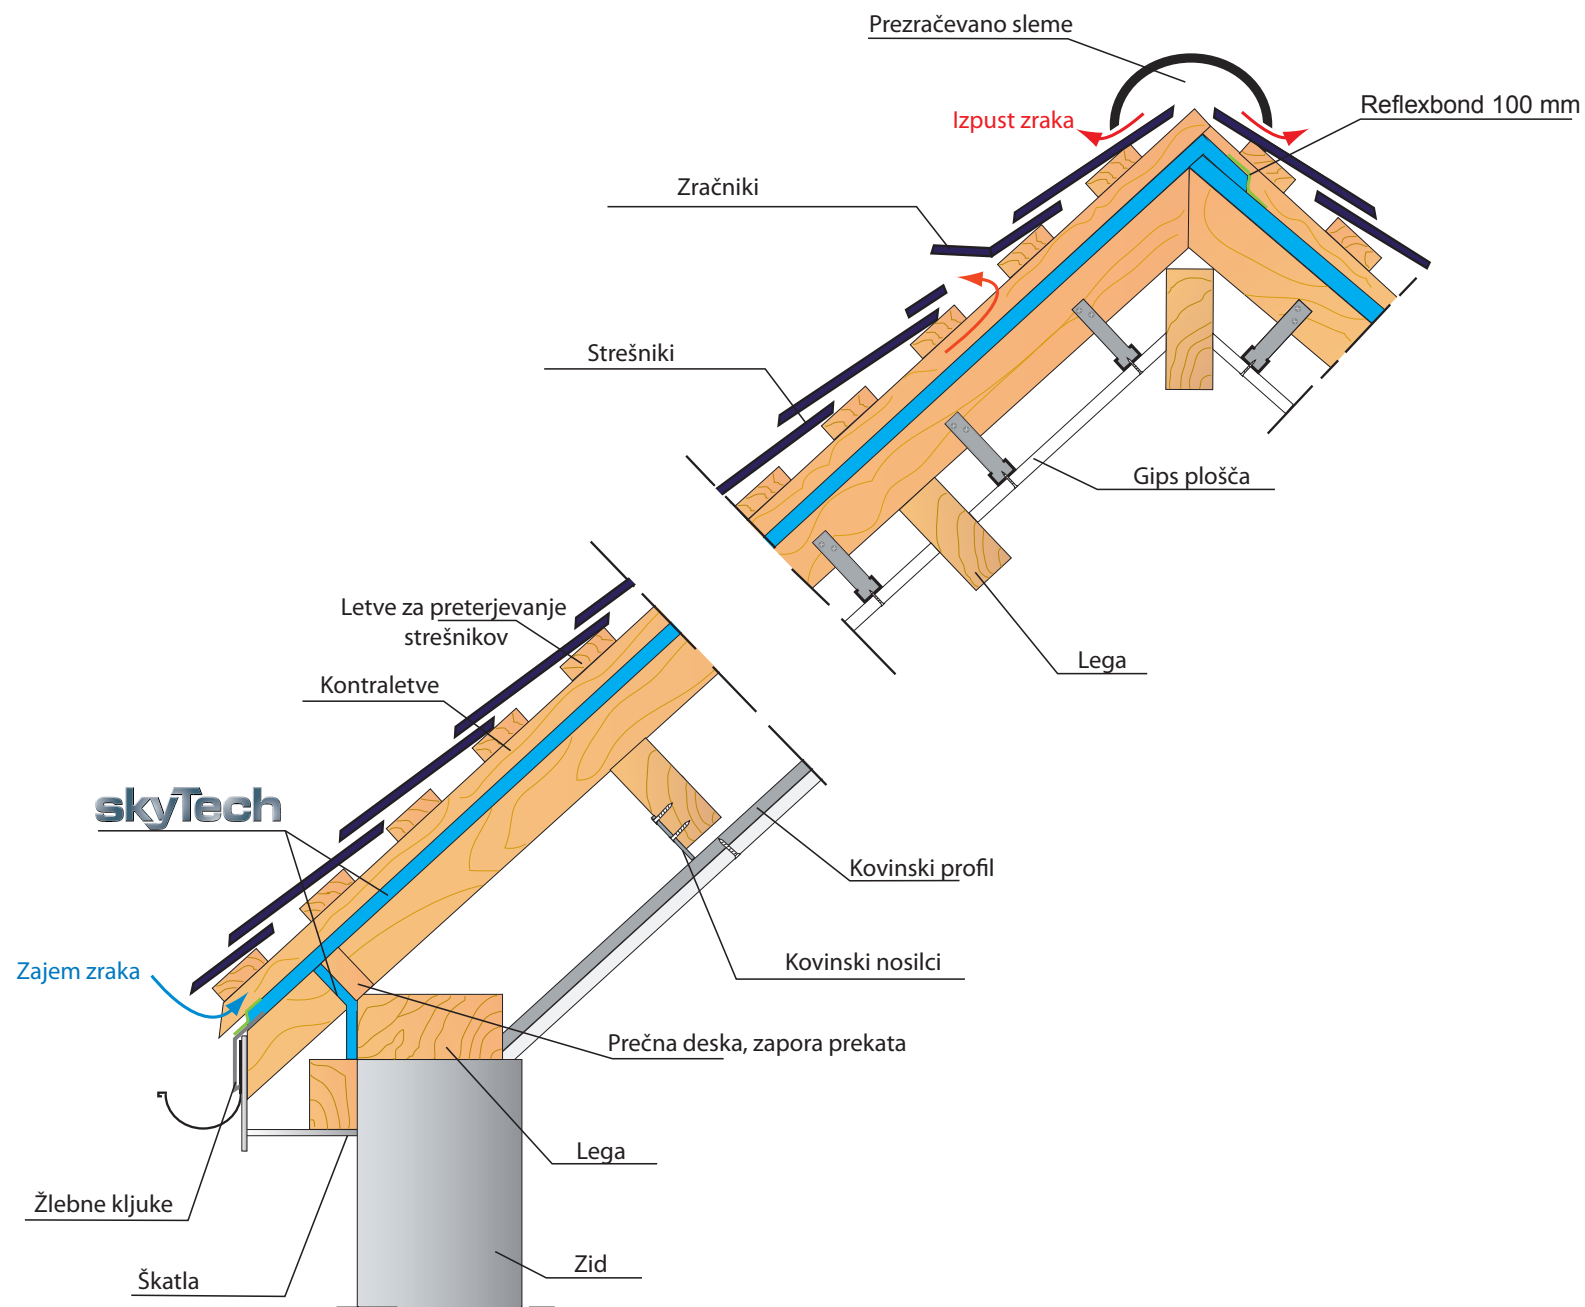


Montaža v kombinaciji z tradicionalno izolacijo

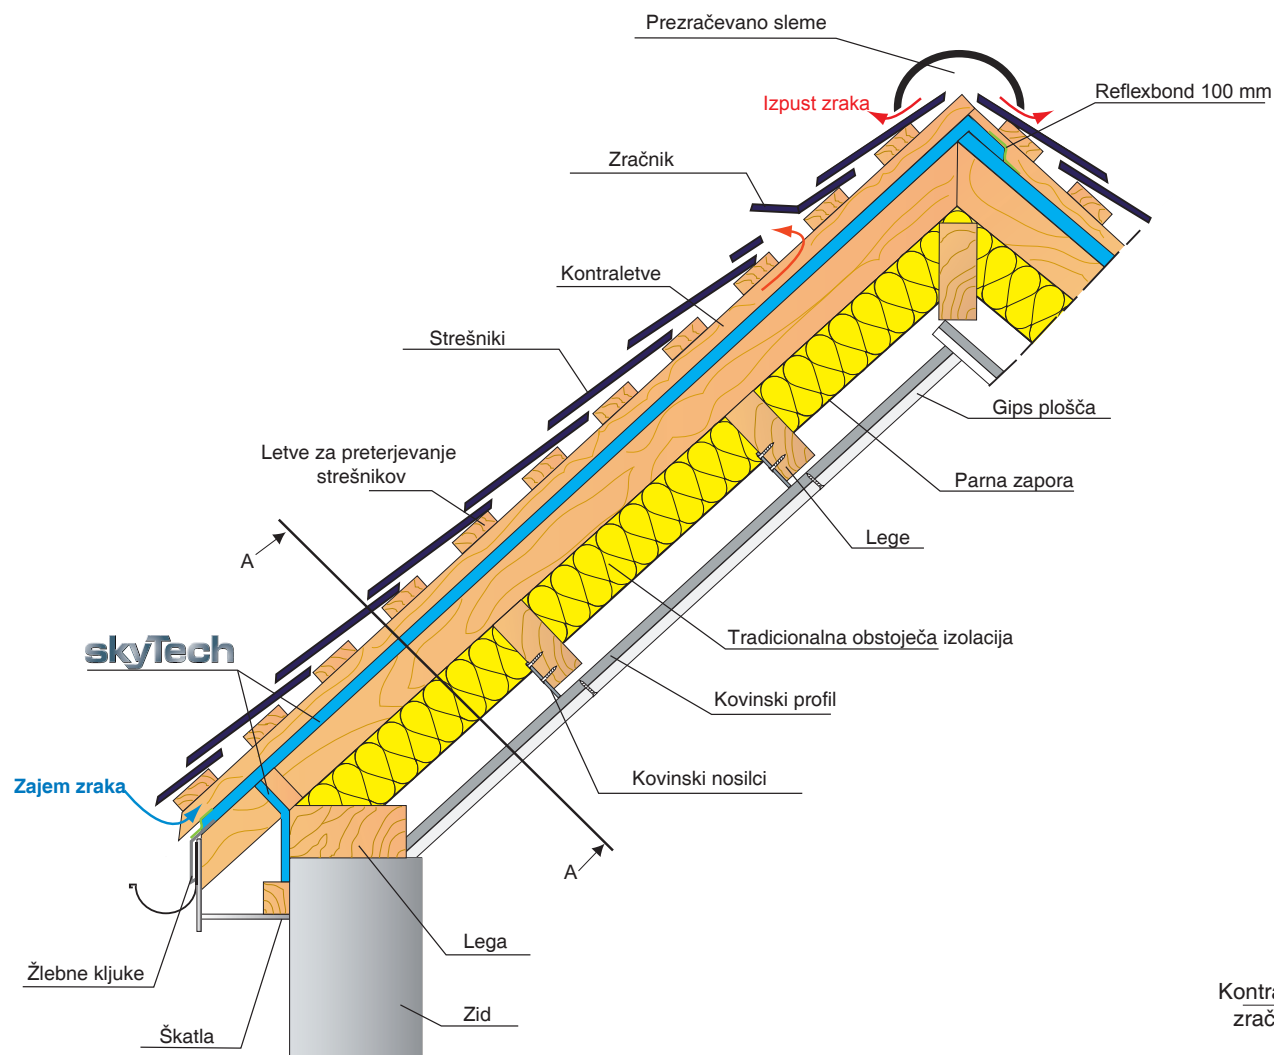


A - A pogled

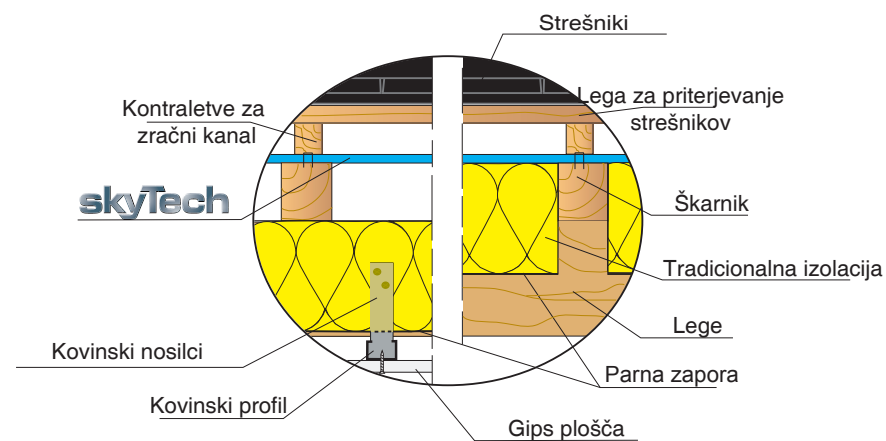


Montaža pod škarniki

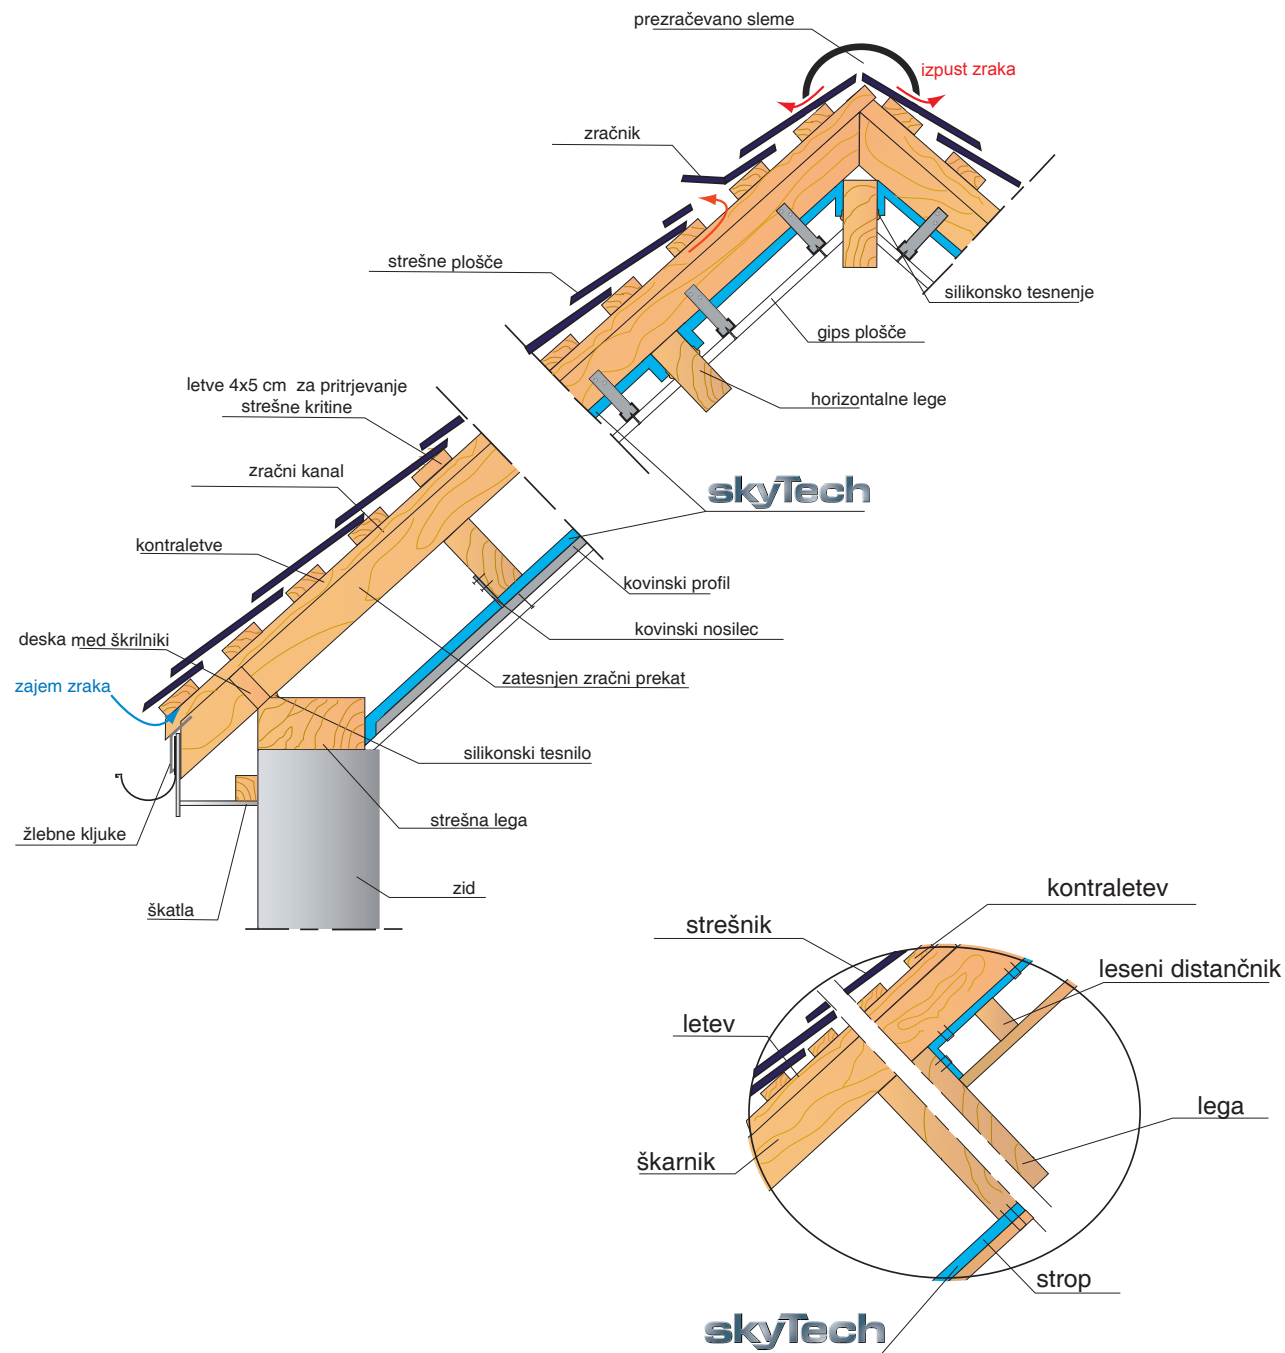


Detajl montaže na leseni strop

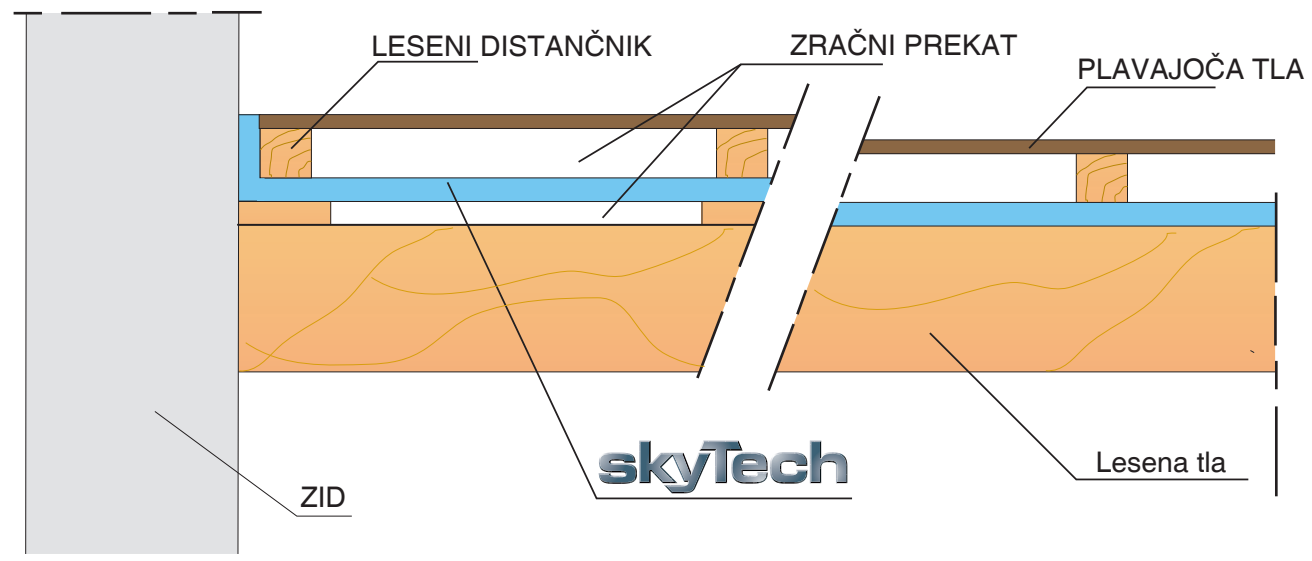


Detajl montaže pod leseni strop

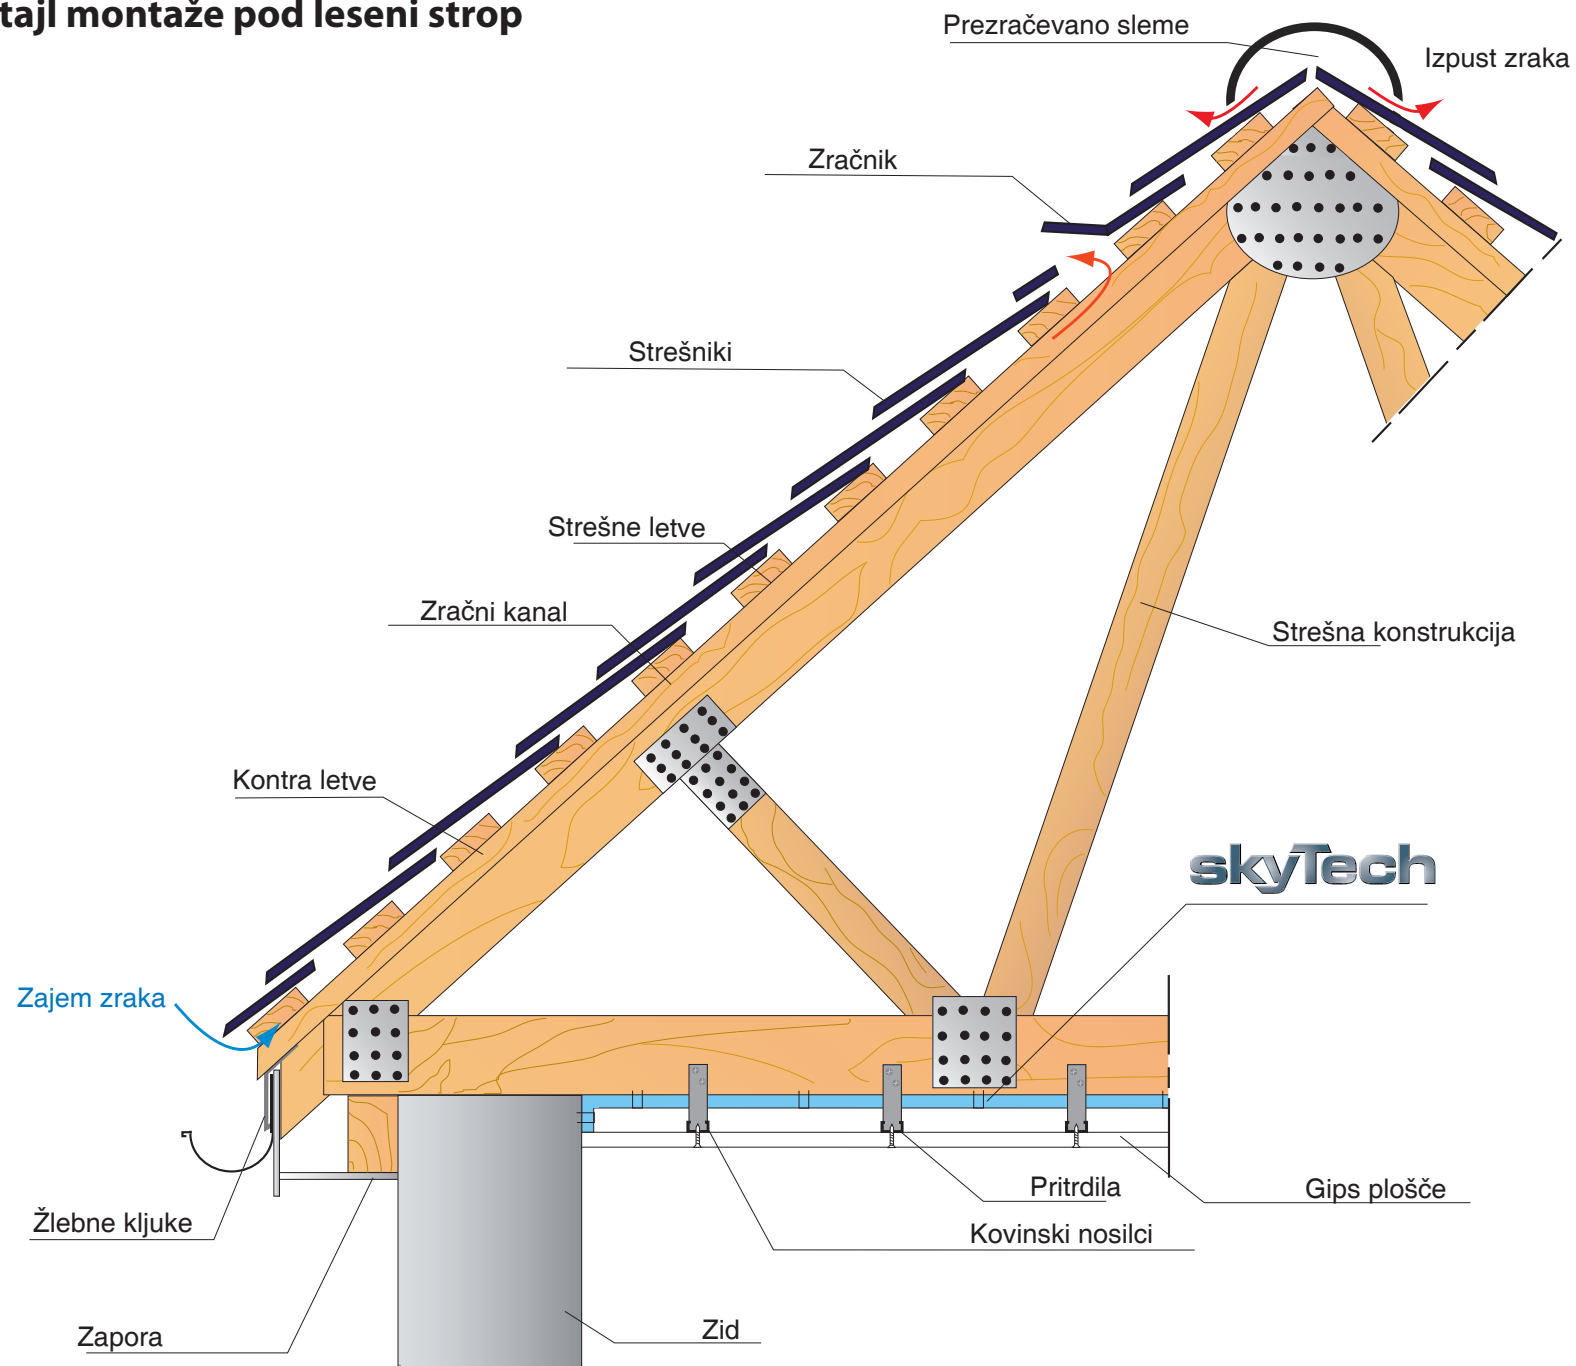


Detajl montaže pod leseni strop

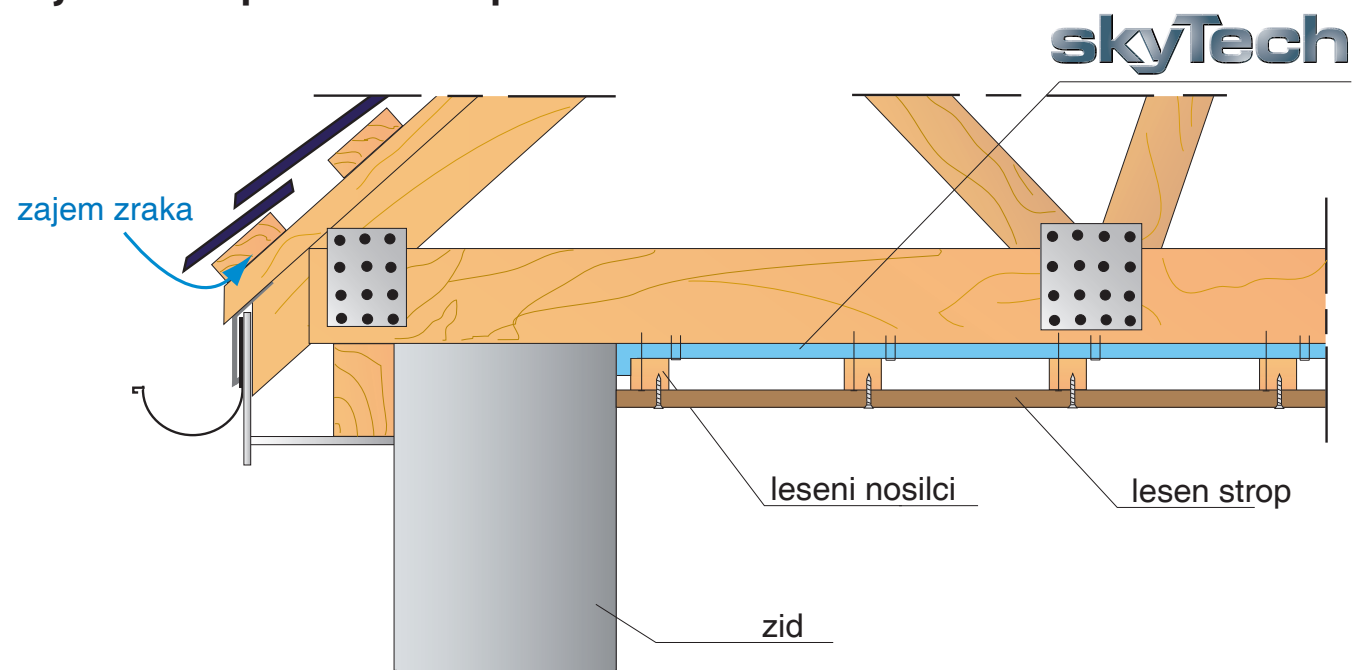


Pod leseni strop 3

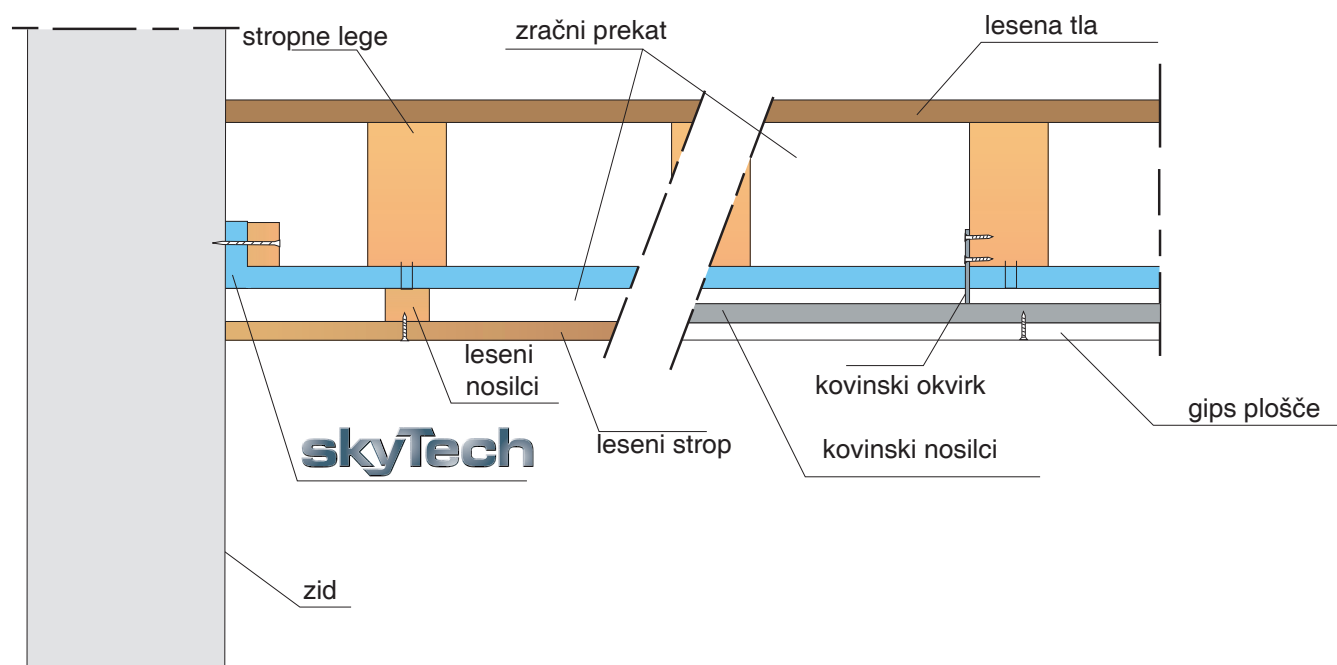


Detajl montaže pod betonski strop

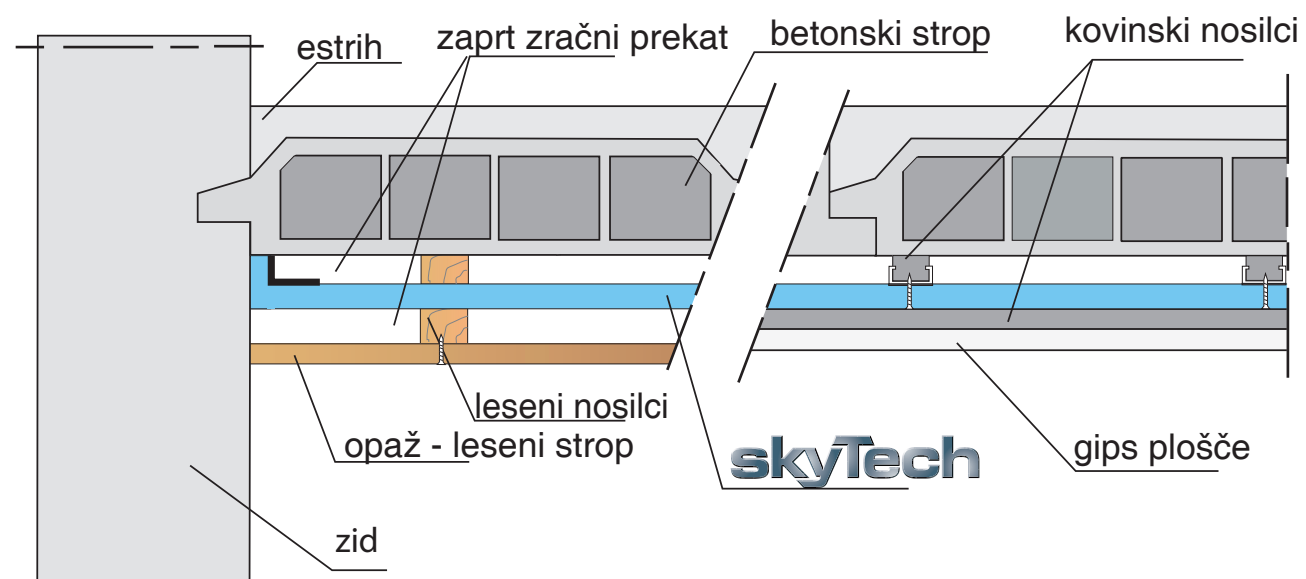



Detajl montaže nad betonski strop

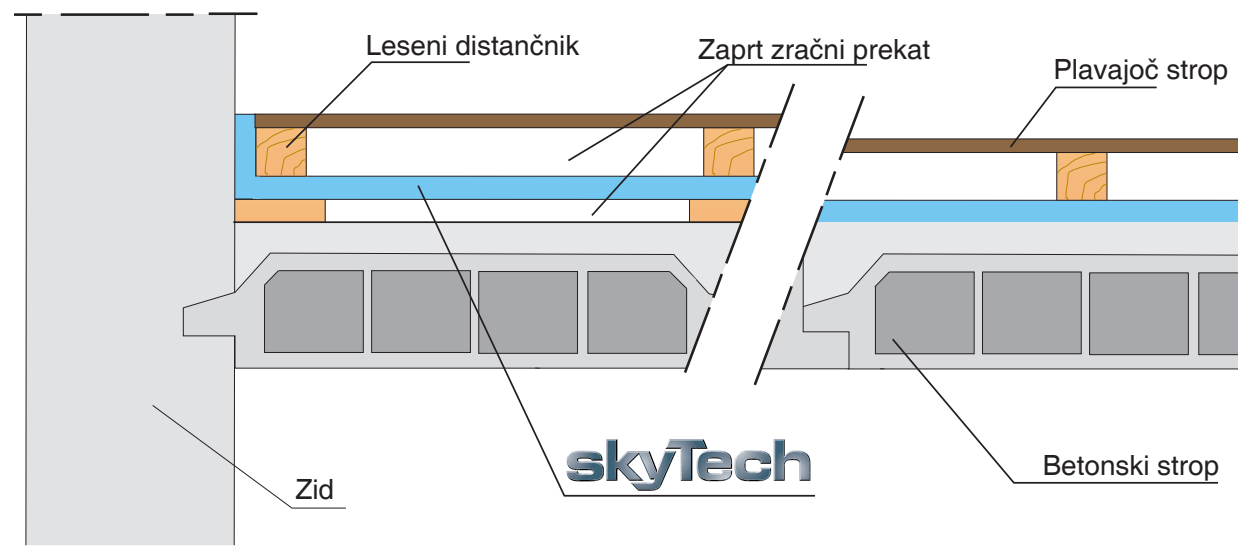

Detajl montaže podtalno gretje

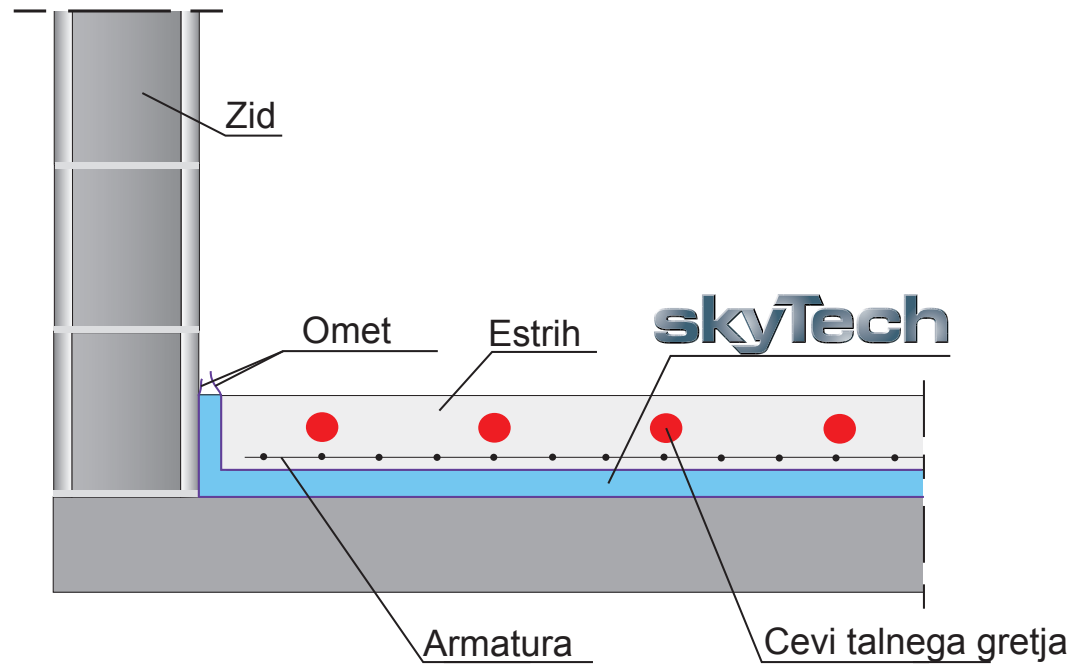

Detajl montaže pri prezračevalnih fasadah

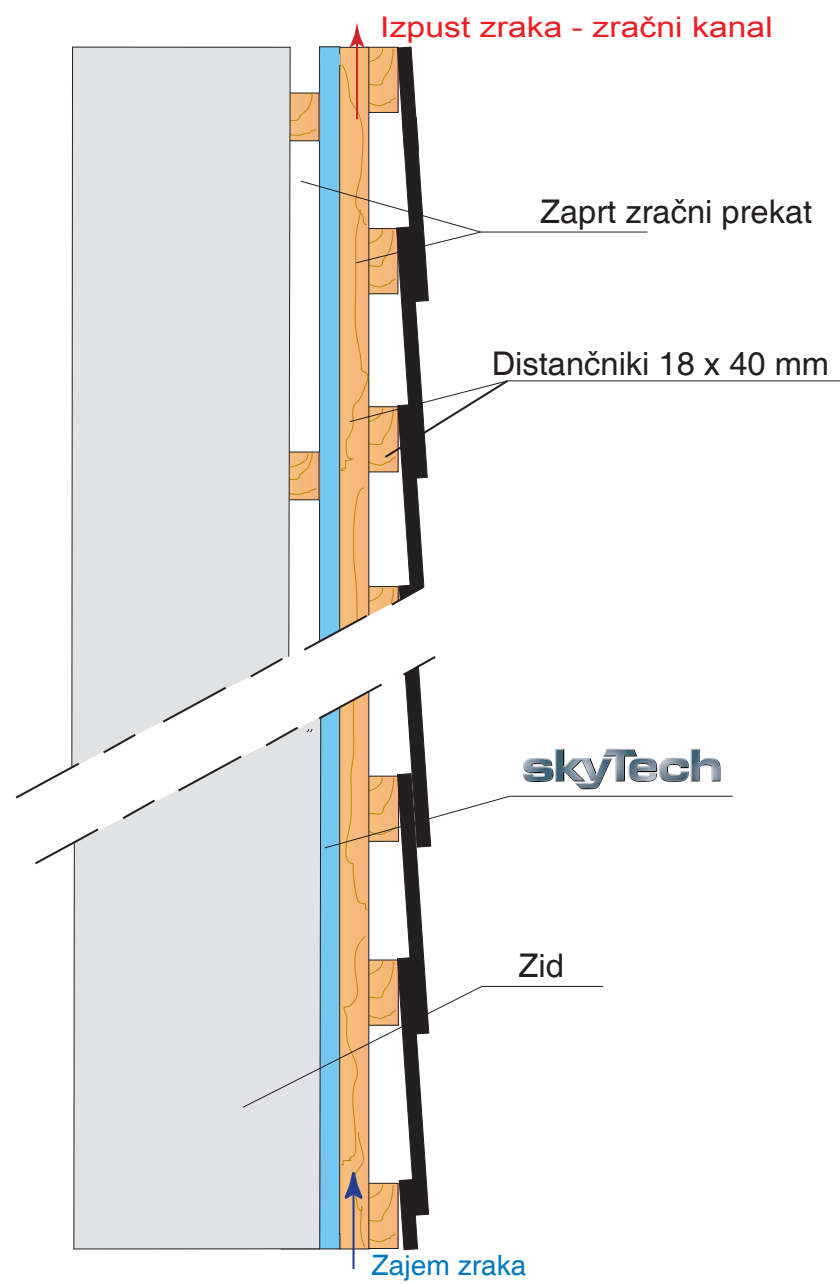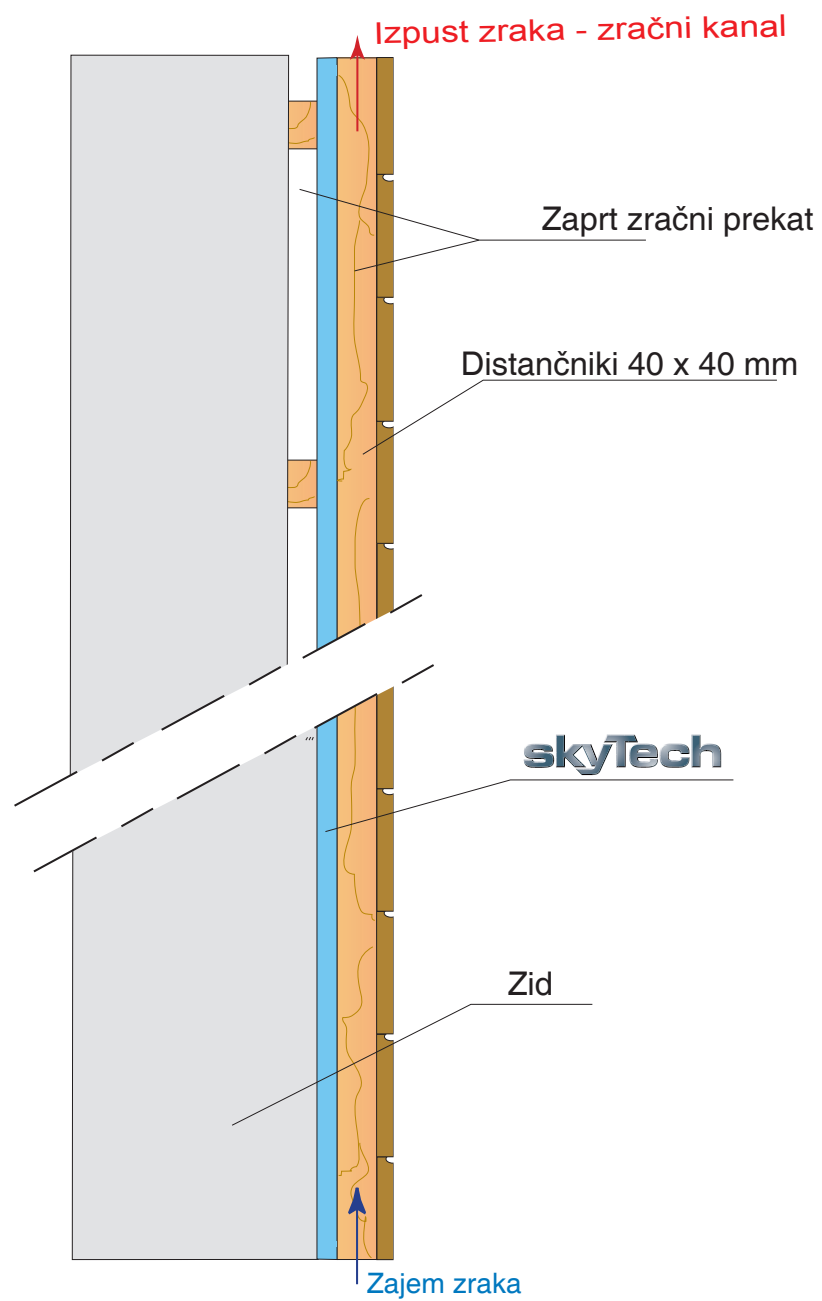

Detajl montaže na notranje zidove

